



Andis T Outliner Trimmer with T Blade Model G Top Blade Replacement

This guide will take through replacing the top blade of the close-cutting T-Blade Andis Model G Trimmers.

Written By: David Taylor



INTRODUCTION

Are the blades to your trimmers not performing like they used to? Well, it may be time to replace them.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [Blade Screw](#) (2)


phillips screw 1.2 mm

Part# 26899. These screws should come with new blade



- [Replacement blades](#) (1)

Step 1 — Disconnect plug from electrical outlet.

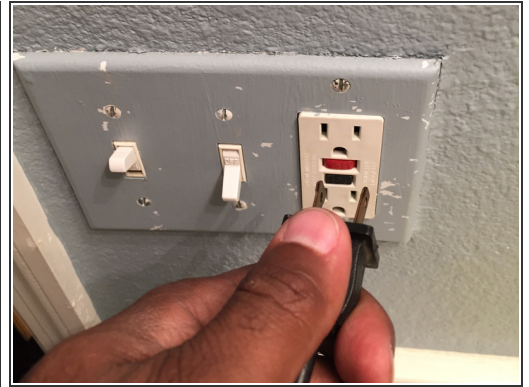


 To reduce the risk of burns, fire, electric shock, or injury turn control to “off” then remove plug from outlet.

Step 2 — Remove two blade screws from top blade.

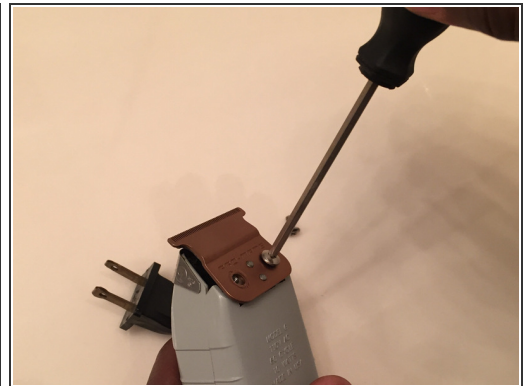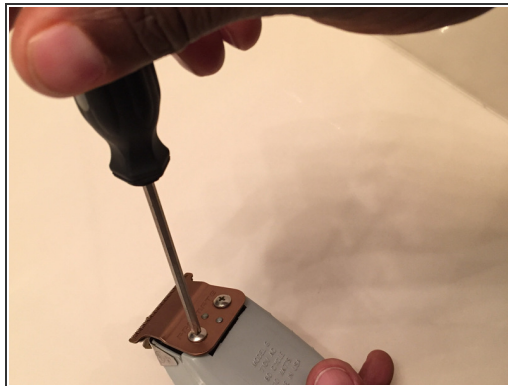


- After removing power from device, remove two blade screws from the top blade.

Step 3 — Lift top blade from the device.

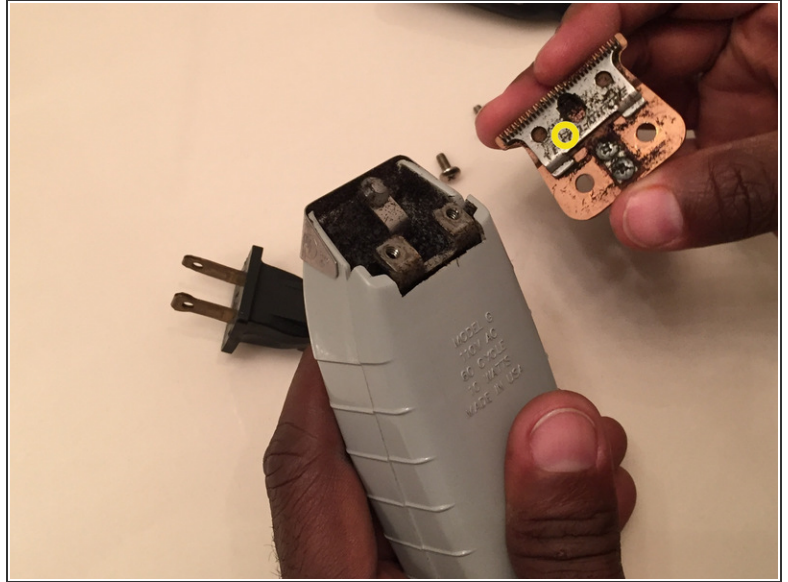


- Lift the top blade from the device. The bottom blade is attached, but not secured, to the underside of the top blade.

Step 4 — Remove bottom blade from top blade.

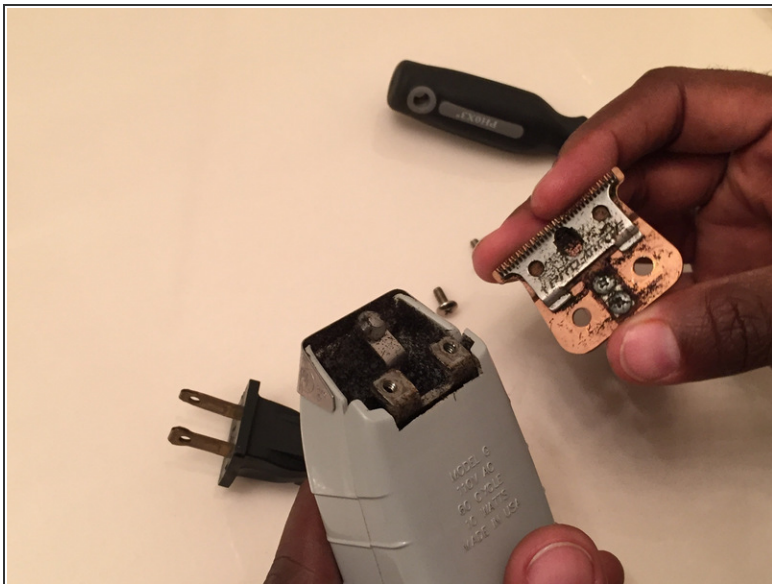

- Flip the top blade over and lift the bottom blade from the top blade.

Step 5 — Clean and lubricate the device if necessary.

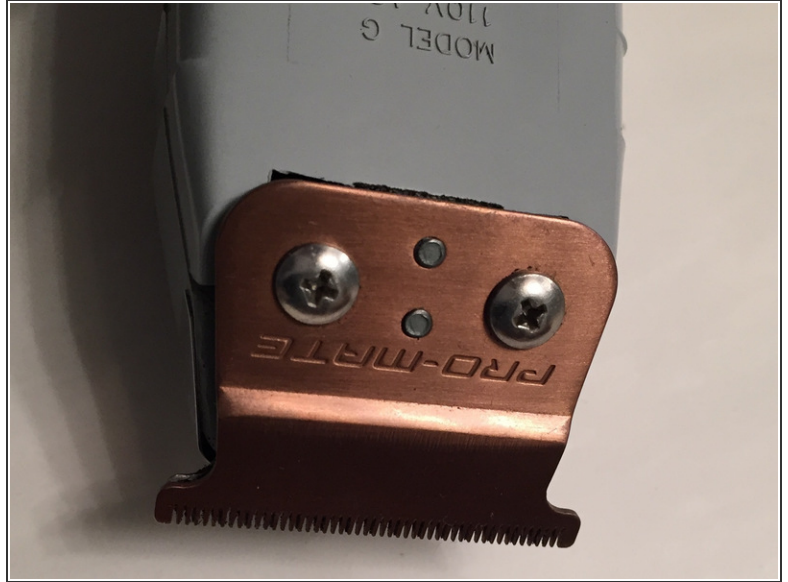

- If the device requires cleaning or lubrication this is the perfect time to do so.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 06:57:29 PM.